


# MOD-FENCE POSTS

## Assembly Instructions

### Unpack all contents

#### Contents:

- 2-Posts Uprights
- 2-Post Bases
- 4-Post Loop Connectors
- 8-White Rivets
- 1-Pop Rivet Tool

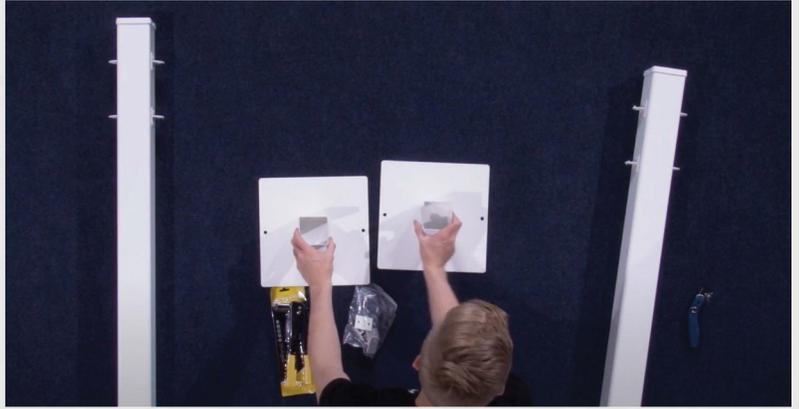

### Step 1

Remove nose piece from rivet tool and replace with middle nose piece on the tool shaft. Make sure to save the Pop Rivet Tool as you will need this to build the Mod-Fence Panels.



### Step 2

Slide Post Upright onto Post Base. Ensure holes on Post line up with the holes on Base.




### Step 3

Align first Post Loop Connector with holes in Post. Rivet Loop Connector to Post using 2 Rivets.



### Step 4

Repeat on remaining Post(s) and Connectors.

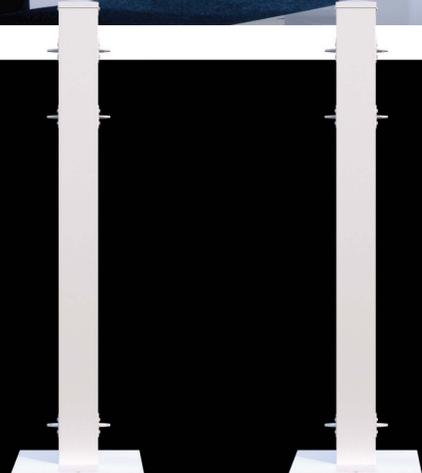

**Watch  
the Video**